



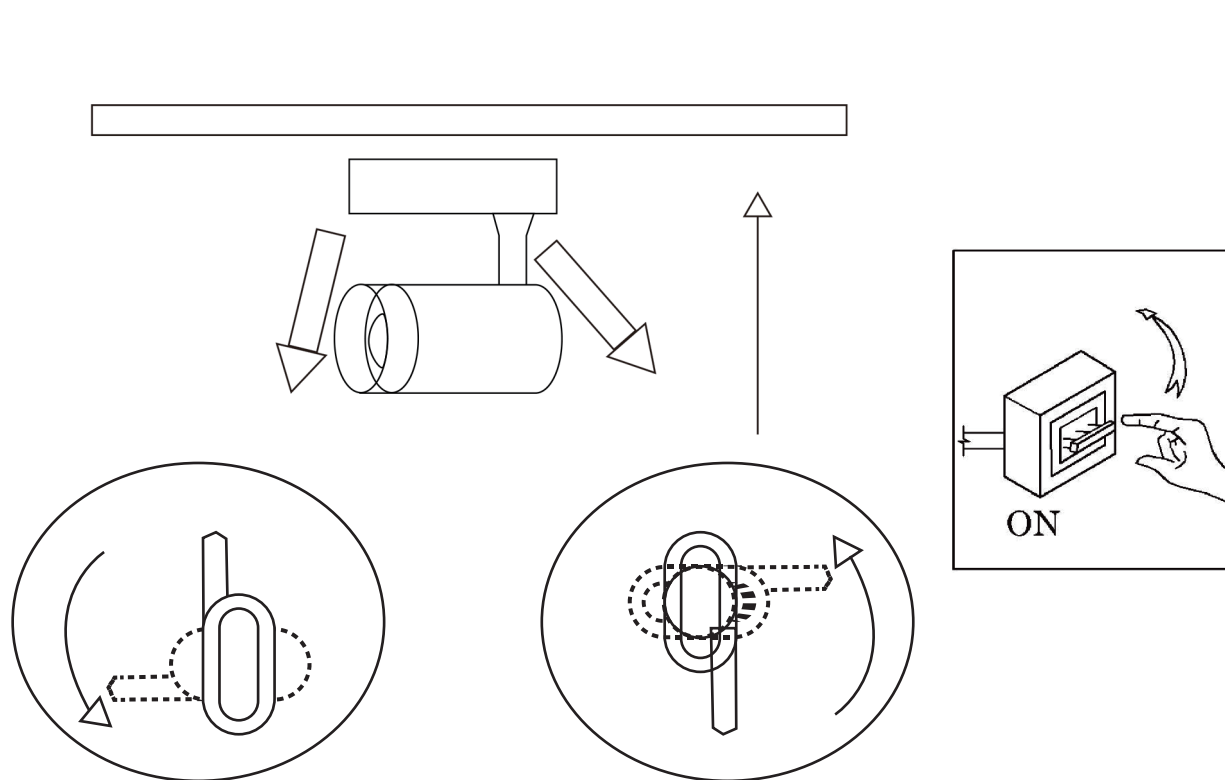

# ASSEMBLY INSTRUCTION / ИНСТРУКЦИЯ

A1710PL-1BK	A1720PL-1BK	A1730PL-1BK	A1613PL-1BK	A1640PL-1BK	A2324PL-1BK
A1710PL-1WH	A1720PL-1WH	A1730PL-1WH	A1613PL-1WH	A1640PL-1WH	A2324PL-1WH
A2310PL-1BK	A2320PL-1BK	A2330PL-1BK	A1632PL-1BK	A2315PL-1BK	A4568PL-1BK
A2310PL-1WH	A2320PL-1WH	A2330PL-1WH	A1632PL-1WH	A2315PL-1WH	A4568PL-1WH
A1711PL-1BK	A1721PL-1BK	A1731PL-1BK			
A1711PL-1WH	A1721PL-1WH	A1731PL-1WH			
A2311PL-1BK	A2321PL-1BK	A2331PL-1BK			
A2311PL-1WH	A2321PL-1WH	A2331PL-1WH			

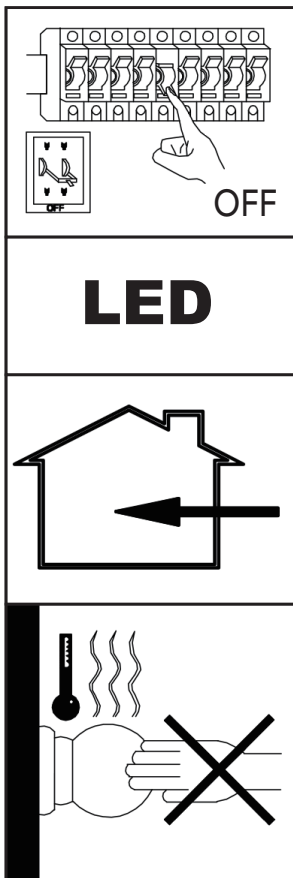

## Warning:

1. Turn off the main power at the circuit breaker before installing in order to prevent possible shock;
2. Don't exceed the rated voltage 230V;
3. Don't install on haven't finished ceiling and loose wood ceiling;
4. Do not use corrosive liquids to clean fixture such as acid, and alkaline liquids. Please use soft cloth when cleaning.