

DAIHATSU (Japan) DELTA DIESEL 3.7	4B			05.1999-->
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			05.1995- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			05.1995- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			05.1995- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			05.1995- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			10.1996- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			10.1996- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			10.1996- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			10.1996- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			10.1996- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1	15B-F			08.1997- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1 4WD	15B-F			05.1995- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1 4WD	15B-F			05.1995- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1 TURBO	15B-FT			10.1996- 05.1999
DAIHATSU (Japan) DELTA DIESEL 4.1 TURBO	15B-FTE			05.1999-->
DAIHATSU (Japan) DELTA DIESEL 4.1 TURBO	15B-FTE			05.1999-->
FORD Ranger 2.5 TDCi		105	143	03.2007-->
FORD Ranger 2.5 D	MD25NA	57	78	10.1999-->
FORD Ranger 2.5 TD	MD25TI	80	109	10.1999-->
IVECO Zeta / TurboZeta / Z-Serie (80-92) 60-11	8040.25.230 R	74	101	01.1987- 05.1991
IVECO Zeta / TurboZeta / Z-Serie (80-92) 65-12	8040.25.200	85	115	01.1987- 12.1992
IVECO Zeta / TurboZeta / Z-Serie (80-92) 79-12	8040.25.220	85	115	01.1987- 12.1992
MAZDA B-Serie (Pickup) 2.5D 4WD	WLE7	62	84	12.2002-->
MAZDA B-Serie (Pickup) 2.5 TD 4WD	MD25TI	80	109	06.1999-->
MAZDA BT-50 3.0 MZR-CD		115	156	01.2007-->
MAZDA BT-50 2.5 MZR-CD		105	143	01.2007-->

METRO-CAMMELL-WEYMANN Taxi Cab / Metrocab 2.4 Turbodiesel	Toyota 2L-T		90	01.2001-05.2006
mitsubishi (Japan) LANCER DIESEL 2.0 4WD-TURBO	4D68-T			10.1995-05.1999
mitsubishi (Japan) LANCER DIESEL 2.0 TURBO	4D68-T			10.1995-05.1999
mitsubishi (Japan) LANCER DIESEL 2.0 TURBO	4D68-T			08.1996-05.1999
mitsubishi (Japan) MIRAGE DIESEL 2.0 4WD-TURBO	4D68-T			10.1995-05.1999
mitsubishi (Japan) MIRAGE DIESEL 2.0 TURBO	4D68-T			10.1995-05.1999
mitsubishi L 200 2.6 4WD	G54B	76	103	11.1989-05.1995
TOYOTA (Japan) COASTER MICROBUS DIESEL 3.7	14B			08.1988-01.1993
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.1	15B-F			01.1996-05.1997
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.1 LPG	1BZ-FPE			03.2002-->
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.1 TURBO	15B-FTE			06.1999-08.2004
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			01.1990-01.1993
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			01.1993-05.1999
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			01.1993-05.1999
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			01.1993-05.1999
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			06.1999-08.2004
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			06.1999-08.2004
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			06.1999-08.2004
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			06.1999-08.2004
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HZ			06.1999-08.2004
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2 TURBO	1HD-FT			05.1995-05.1999
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2	1HD-FTE			06.1999-

TURBO				08.2004
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2 TURBO	1HD-T			01.1990-01.1993
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2 TURBO	1HD-T			01.1990-01.1993
TOYOTA (Japan) COASTER MICROBUS DIESEL 4.2 TURBO	1HD-T			01.1993-05.1995
TOYOTA (Japan) COMMUTER MICROBUS DIESEL 3.0	5L			08.1998-->
TOYOTA (Japan) COMMUTER MICROBUS DIESEL 3.0 4WD	5L			08.1998-->
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			10.1991-09.1995
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			10.1991-09.1995
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			10.1991-12.1995
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			10.1991-12.1995
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			12.1995-01.1996
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			12.1995-09.1996
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			01.1996-04.1999
TOYOTA (Japan) CROWN DIESEL 2.4 TURBO	2L-T			09.1996-04.1999
TOYOTA (Japan) CROWN SEDAN CONFORT DIESEL 2.4 TURBO	2L-TE			12.1995-08.1999
TOYOTA (Japan) GRANVIA - GRAND HIACE DIESEL 3.0 4WD-TURBO	1KZ-TE			08.1995-08.1997
TOYOTA (Japan) GRANVIA - GRAND HIACE DIESEL 3.0 4WD-TURBO	1KZ-TE			08.1997-05.2002
TOYOTA (Japan) GRANVIA - GRAND HIACE DIESEL 3.0 TURBO	1KZ-TE			08.1995-08.1997
TOYOTA (Japan) GRANVIA - GRAND HIACE DIESEL 3.0 TURBO	1KZ-TE			08.1995-08.1997
TOYOTA (Japan) GRANVIA - GRAND HIACE DIESEL 3.0 TURBO	1KZ-TE			08.1997-05.2002
TOYOTA (Japan) HIACE REGIUS DIESEL 3.0	5L			06.1997-05.2002
TOYOTA (Japan) HIACE REGIUS DIESEL 3.0 4WD	5L			06.1997-05.2002

TOYOTA (Japan) HIACE REGIUS DIESEL 3.0 4WD-TURBO	1KZ-TE			04.1997-05.2002
TOYOTA (Japan) HIACE REGIUS DIESEL 3.0 4WD-TURBO	1KZ-TE			04.1997-07.1999
TOYOTA (Japan) HIACE REGIUS DIESEL 3.0 TURBO	1KZ-TE			04.1997-05.2002
TOYOTA (Japan) HIACE REGIUS DIESEL 3.0 TURBO	1KZ-TE			04.1997-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.4	2L			08.1989-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.4	2L			08.1989-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.4	2L			10.1990-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.4 TURBO	2L-T			08.1989-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.4 TURBO	2L-TE			08.1989-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.8	3L			10.1990-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.8 4WD	3L			08.1989-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 2.8 4WD	3L			10.1990-08.1993
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0	5L			08.1998-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0	5L			08.1998-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0	5L			08.1998-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0	5L			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0	5L			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0	5L			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD	5L			08.1998-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD	5L			08.1998-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD	5L			08.1998-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD	5L			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD	5L			07.1999-->

TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD	5L			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD-TURBO	1KZ-TE			08.1993-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD-TURBO	1KZ-TE			08.1993-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 4WD-TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			08.1993-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			08.1993-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			08.1993-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			08.1993-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			08.1995-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			08.1995-07.1999
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HIACE REGIUSACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-->
TOYOTA (Japan) HILUX DIESEL 2.4 4WD-TURBO	2L-TE			08.1995-08.1997
TOYOTA (Japan) HILUX DIESEL 2.4 4WD-TURBO	2L-TE			08.1995-08.1997
TOYOTA (Japan) HILUX DIESEL 2.4 4WD-TURBO	2L-TE			08.1997-08.1999
TOYOTA (Japan) HILUX DIESEL 2.4 4WD-TURBO	2L-TE			11.1997-08.1999
TOYOTA (Japan) HILUX DIESEL 2.8 4WD	3L			08.1994-08.1997
TOYOTA (Japan) HILUX DIESEL 2.8 4WD	3L			08.1994-08.1997

TOYOTA (Japan) HILUX DIESEL 2.8 4WD	3L			08.1994- 08.1997
TOYOTA (Japan) HILUX DIESEL 3.0 4WD	5L			08.1997-->
TOYOTA (Japan) HILUX DIESEL 3.0 4WD	5L			08.1997-->
TOYOTA (Japan) HILUX DIESEL 3.0 4WD	5L			11.1997-->
TOYOTA (Japan) HILUX SARF DIESEL 2.4 TURBO	2L-TE			08.1990- 08.1993
TOYOTA (Japan) HILUX SARF DIESEL 2.4 TURBO	2L-TE			08.1991- 08.1993
TOYOTA (Japan) HILUX SARF DIESEL 3.0 TURBO	1KD-FTV			08.2000- 10.2002
TOYOTA (Japan) HILUX SARF DIESEL 3.0 TURBO	1KD-FTV			10.2002- 05.2003
TOYOTA (Japan) HILUX SARF DIESEL 3.0 TURBO	1KD-FTV			05.2003- 02.2004
TOYOTA (Japan) HILUX SARF DIESEL 3.0 TURBO	1KD-FTV			02.2004-->
TOYOTA (Japan) HILUX SARF DIESEL 3.0 TURBO	1KZ-TE			08.1993- 11.1995
TOYOTA (Japan) HILUX SARF DIESEL 3.0 TURBO	1KZ-TE			12.1995- 06.1999
TOYOTA (Japan) HILUX SARF DIESEL 3.0 TURBO	1KZ-TE			06.1999- 08.2000
TOYOTA (Japan) LAND CRUISER DIESEL 2.4 TURBO	2L-TE			04.1990- 05.1993
TOYOTA (Japan) LAND CRUISER DIESEL 2.4 TURBO	2L-TE			04.1990- 05.1993
TOYOTA (Japan) LAND CRUISER DIESEL 2.4 TURBO	2L-TE			08.1991- 05.1993
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KD-FTV			07.2000- 10.2002
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KD-FTV			10.2002- 02.2004
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KD-FTV			10.2002- 02.2004
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KD-FTV			10.2002- 02.2004
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KD-FTV			02.2004-->
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KD-FTV			02.2004-->
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KD-FTV			02.2004-->
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KZ-TE			05.1993- 04.1996

TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KZ-TE			05.1993-04.1996
TOYOTA (Japan) LAND CRUISER DIESEL 3.0 TURBO	1KZ-TE			04.1996-07.2000
TOYOTA (Japan) LAND CRUISER DIESEL 3.5	1PZ			01.1990-01.1994
TOYOTA (Japan) LAND CRUISER DIESEL 3.5	1PZ			04.1990-01.1994
TOYOTA (Japan) LAND CRUISER DIESEL 3.5	1PZ			04.1990-01.1994
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			01.1990-01.1995
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			01.1990-01.1998
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			04.1990-08.1999
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			12.1992-08.1999
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			01.1994-01.1995
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			01.1994-08.1999
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			01.1994-08.1999
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			01.1995-08.1999
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			08.1999-->
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			08.1999-->
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			09.1999-->
TOYOTA (Japan) LAND CRUISER DIESEL 4.2	1HZ			11.1999-->
TOYOTA (Japan) LAND CRUISER DIESEL 4.2 TURBO	1HD-FT			01.1995-01.1998
TOYOTA (Japan) LAND CRUISER DIESEL 4.2 TURBO	1HD-FTE			01.1998-->
TOYOTA (Japan) LAND CRUISER DIESEL 4.2 TURBO	1HD-T			01.1990-01.1995
TOYOTA (Japan) MARK CHASER CRESTA DIESEL 2.4	2L			08.1988-08.1993
TOYOTA (Japan) MARK CHASER CRESTA DIESEL 2.4 TURBO	2L-T			08.1988-02.1993
TOYOTA (Japan) MARK CHASER CRESTA DIESEL 2.4 TURBO	2L-TE			10.1992-01.1996

TOYOTA (Japan) MARK CHASER CRESTA DIESEL 2.4 TURBO	2L-TE			01.1996-09.1996
TOYOTA (Japan) MARK CHASER CRESTA DIESEL 2.4 TURBO	2L-TE			09.1996-08.1999
TOYOTA (Japan) MEGACRUISER 4.1 TURBO	15B-FT			01.1996-06.1999
TOYOTA (Japan) MEGACRUISER 4.1 TURBO	15B-FTE			06.1999-->
TOYOTA (Japan) QUICK DELIVERY DIESEL 3.0	5L			08.2001-06.2004
TOYOTA (Japan) QUICK DELIVERY DIESEL 3.0	5L			05.1999-08.2001
TOYOTA (Japan) QUICK DELIVERY DIESEL 3.0 4WD	5L			08.2001-06.2004
TOYOTA (Japan) QUICK DELIVERY DIESEL 3.0 4WD	5L			06.1999-08.2001
TOYOTA (Japan) QUICK DELIVERY DIESEL 3.7	4B			03.2000-06.2004
TOYOTA (Japan) QUICK DELIVERY DIESEL 3.7	4B			08.1999-06.2004
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.0	11B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.0	11B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			08.1988-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7	14B			10.1989-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 4A T	14B-T			10.1989-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 4WD	14B			10.1989-05.1995

TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 4WD	14B			10.1989-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 4WD	14B			05.1990-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 TURBO	14B-T			10.1989-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 TURBO	14B-T			10.1989-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 TURBO	14B-T			10.1989-05.1995
TOYOTA (Japan) TOYOACE - DYNA DIESEL 3.7 TURBO	14B-T			08.1990-05.1995
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0	5L			07.2001-->
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0	5L			07.2001-->
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0	5L			07.2001-->
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0	5L			05.1999-07.2001
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0	5L			05.1999-07.2001
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0	5L			05.1999-07.2001
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0 4WD	5L			07.2001-->
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0 4WD	5L			07.2001-->
TOYOTA (Japan) TOYOACE G15 - DYNA 150 DIESEL 3.0 4WD	5L			07.2001-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 4.1 LPG	15B-FP			05.1999-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 3.7	4B			05.1999-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 3.7	4B			05.1999-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 3.7	4B			05.1999-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-08.1997
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999

TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			10.1996-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			10.1996-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			10.1996-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1	15B-F			10.1996-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 4WD	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 4WD	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 4WD	15B-F			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 4WD-TURBO	15B-FT			01.1997-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 CNG	15B-CNG			10.2000-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 CNG	15B-CNG			10.2000-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 CNG	15B-CNG			11.2000-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 CNG	15B-CNG			08.2001-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 CNG	1BZ-FNE			05.2003-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 CNG	1BZ-FNE			05.2003-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL	15B-LPG			05.2000-

4.1 LPG				12.2002
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			05.2000-12.2002
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			08.2001-12.2002
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			08.2001-12.2002
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			06.2002-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			12.2002-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			12.2002-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			12.2002-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	15B-LPG			12.2002-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	1BZ-FPE			05.2003-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 LPG	1BZ-FPE			05.2003-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 TURBO	15B-FT			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 TURBO	15B-FT			05.1995-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 TURBO	15B-FT			12.1997-05.1999
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 TURBO	15B-FTE			05.1999-->
TOYOTA (Japan) TOYOACE G25 - DYNA 200 DIESEL 4.1 TURBO	15B-FTE			05.1999-->
TOYOTA (Japan) TOYOACE G35 - DYNA 350 DIESEL 4.1	15B			10.1997-05.1999
TOYOTA (Japan) TOYOACE G35 - DYNA 350 DIESEL 4.1	15B-F			05.1995-05.1999
TOYOTA (Japan) TURING HIACE DIESEL 3.0 4WD-TURBO	1KZ-TE			07.1999-05.2002
TOYOTA (Japan) TURING HIACE DIESEL 3.0 TURBO	1KZ-TE			07.1999-05.2002
TOYOTA 4-Runner 3.0 TD	1KZ-T	92	125	10.1993-03.1996
TOYOTA Avensis I (T22) 2.0 D-4D Turbodiesel	1CD-FTV	81	110	04.2000-->

TOYOTA Coaster 3.7 D	14B			07.1988-03.1993
TOYOTA Coaster 4.2 D	1HZ			01.1990-->
TOYOTA Coaster 4.2 D Turbo	1HD-T			01.1990-->
TOYOTA Dyna (U60-U90) 3.0 D	11B			01.1985-08.1987
TOYOTA Dyna 200 3.0 D	11B			08.1987-08.1988
TOYOTA Dyna 200 3.7 D	14B			08.1988-->
TOYOTA Dyna 200 3.7 D Turbo	14BT			04.1990-->
TOYOTA HiAce 2.4 D	2L	43	58	08.1995-->
TOYOTA HiAce 2.4 D	2L	57	78	10.1993-->
TOYOTA HiAce 2.4 D	2L	55	75	08.1984-08.1989
TOYOTA HiAce 2.4 D	2L	55	75	02.1990-->
TOYOTA HiAce 2.4 D	2L	55	75	08.1989-->
TOYOTA HiAce 2.4 D	2L	58	79	08.1995-->
TOYOTA HiAce 2.4 D Turbo	2LT	66	90	08.1995-->
TOYOTA HiAce 2.4 D Turbo	2LT	66	90	01.1996-->
TOYOTA HiAce 2.4 D Wagon	2L	55	75	05.1984-11.1989
TOYOTA HiAce 2.4 D	2L	55	75	07.1999-->
TOYOTA HiLux 2.4 D	2L		75	07.1998-01.2002
TOYOTA HiLux 2.4 D		55	75	07.1998-->
TOYOTA HiLux 2.4 D	2L	59	80	08.1991-->
TOYOTA HiLux 2.4 D	2L	59	80	01.1984-12.1989
TOYOTA HiLux 2.4 D	2L	61	83	03.1989-->
TOYOTA HiLux 2.4 TD 4WD	2L-T	66	90	08.1998-->
TOYOTA Land Cruiser 3.0 D-4D	1KZ-TE		125	09.2002-02.2010
TOYOTA Land Cruiser 3.0 D	1KD-FTV		95	04.2002-02.2010
TOYOTA Land Cruiser 3.0 D-4D	1KD-FTV	120	163	01.2003-02.2010
TOYOTA Land Cruiser 3.0 D-4D	1KD-FTV	122	166	11.2004-

				02.2010
TOYOTA Land Cruiser 3.0 TD	1KZ-TE	92	125	04.1996-->
TOYOTA Land Cruiser 4.2 TD	1HD-FT	125	170	03.1995-->
TOYOTA Land Cruiser 4.2 TD	1HD-T	118	160	10.1992-->
TOYOTA Land Cruiser 2.4 TD	2L-T	66	90	01.1990- 05.1996
TOYOTA Land Cruiser 2.4 TD	2L-T	66	90	01.1990- 05.1996
TOYOTA Land Cruiser 3 0 TD	1KZ-T	92	125	05.1993- 05.1996
TOYOTA Land Cruiser 2.4	22REKat.	84	114	12.1988- 12.1996
TOYOTA Land Cruiser 4.2 TD	1HD-FTE	150	204	01.1998-->
TOYOTA Land Cruiser 4.2 D	1H-Z	97	132	01.1990-->
TOYOTA Land Cruiser 3.0 D-4D	1KD-FTV	120	163	11.2000- 02.2003
TOYOTA Land Cruiser 4.2 TD	1HD-T	123	167	01.1990- 12.1997
VW Taro 2.4 D	2L	61	83	06.1989- 04.1997
VW Taro 2.4 D	2L	59	80	06.1989- 04.1997
YANMAR MARINE DIESEL LP-Serie 6LP-DTE/STE				
YANMAR MARINE DIESEL LP-Serie 6LPA-DTP			260	
YANMAR MARINE DIESEL LP-Serie 6LPA-STP			315	